




X-BANNER F Setup Instructions

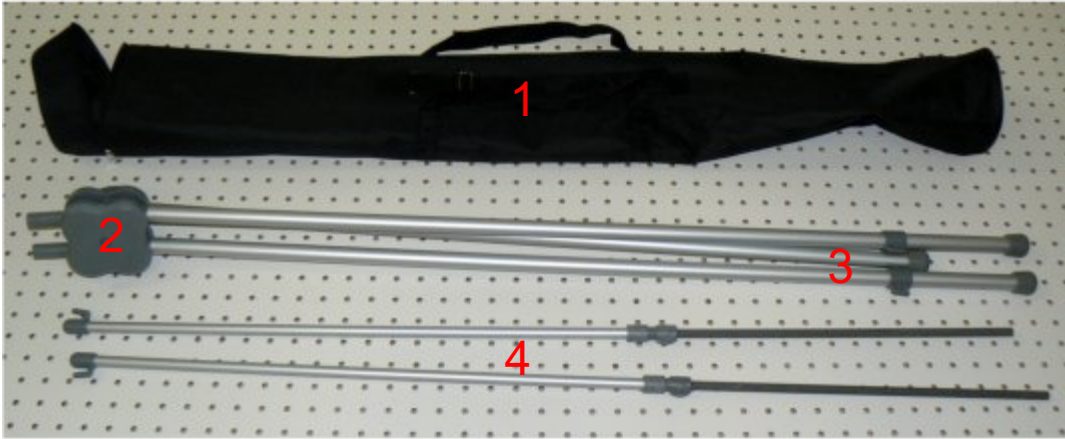

- 1. Carrying Case
- 2. Center Hub
- 3. Legs
- 4. Arms (2)



1. Push in the button on the Center Hub to widen the front Legs to about the correct width of your banner. As you expand the legs, the top arm holders will also widen. Adjust the legs until they lock in place and the button pops out.



2. Adjust the back support Leg so that the front Legs lean back a little, and a sturdy tripod base is created. Tighten the back support Leg with the thumbscrew at the back of the Center Hub.



3. Twist the graphite end of each Arm into the top of the Center Hub. They fit snugly.



4. Slide the top aluminum part of the Arms up to about the same height on each side. The total stand height should be about 6 inches taller than the banner height. Tighten the Arm screw to secure.



5. Hang your banner from the top first. Put both top grommets of your banner on the hooks. Then pull the banner down and hook the bottom grommets.

6. Adjust the telescoping length of the Arms and the back support Leg until the desired tension and banner angle are achieved. **Be careful not to over-tension the banner, you may break the Arm holders on the Hub.**

